



Redistributed under licence from HAE by Brian Dent Ltd. Licence expires on 31/01/2024

FRAMES & LADDERS

- Rungs – Free from damage
Castings – No cracks
Weld – Free from cracks
Uprights/tubes – Straight
Spigots
Reinforcements
Clip-in guard rail/Hand rail frames
Ladder/Stiles/Rungs – Free from damage

CASTOR AND ADJUSTABLE LEGS

- Adjusters – Moves freely
Thread – Free from damage
End Collar – Free from damage
Straightness
Wheels – Move & Rotate
Spindle
Brake – Check function
Housing
Spigot

DECKS/PLATFORMS

- Hooks –Function freely
Supports
Welds – Free from cracks
Deck fixing rivets
Deck damage
Hinges – Function
Labels – States SWL

OUTRIGGERS OR STABILISERS

- Castings – Free from damage
Tubes – Straight & free from dents
Foot
Nuts & Bolts
Interlock Clips – Function
Welds – Free from cracks
Clip function

TOE BOARDS AND CLIPS

- Timber – Straight
Fittings - Function

Please keep this leaflet safely as it may be required for future reference



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

Copyright Hire Association Europe April 2011

Inspect the components before use – using the simple check guide on the reverse of this leaflet.

SETTING UP

- Ensure that where platforms have hinged openings, these remain closed when working from the equipment.
Under ON decks/platforms. Under position on all working rails/hand rails and toe boards are in position that the required guard supplier.
Under certain conditions it may be necessary for the mobile access tower to be "tidied-in" using approved methods. Seek advice from your supplier.

USING THE MOBILE ACCESS TOWER

- If moving the tower in adverse conditions, uneven ground or slight wind, it may be safer to reduce the height of the tower and re-erect it at the new location.
If moving the tower in adverse conditions, uneven ground or slight wind, it may be safer to reduce the height of the tower and re-erect it at the new location.
If moving the tower in adverse conditions, uneven ground or slight wind, it may be safer to reduce the height of the tower and re-erect it at the new location.



Before Starting Work...

- Under the terms of hire, you are responsible for the safe custody of the equipment. You must indemnify the hire company against loss or unreasonable damage such as vandalism.
Some hire companies will offer insurance cover at an extra cost. However, you must always secure the equipment yourself against theft or vandalism.
In addition, you should be aware that if you cause any damage to property belonging to a third party, or if you are involved in a highway accident, it is unlikely that a normal insurance policy will give you any protection.

- Ensure that the required guard supplier.
Under certain conditions it may be necessary for the mobile access tower to be "tidied-in" using approved methods. Seek advice from your supplier.
Under certain conditions it may be necessary for the mobile access tower to be "tidied-in" using approved methods. Seek advice from your supplier.

- The following items of personal protective equipment (ppe) are the minimum that should be worn whenever using mobile access towers.
You must wear suitable protective footwear ideally safety boots to EN345.
Hard hat with chin strap to EN397.
Persons working near this equipment will also need to wear appropriate personal protective equipment.

- Ensure that the correct type and number of components are used as specified in the manufacturers assembly guide.
Before setting up the mobile access tower make sure the ground surface is suitable. Where the equipment may be used on soft or uneven ground, castors should be replaced with base plates and appropriate load bearing boards.
The mobile tower must only be assembled to the heights specified for interior or exterior use in the manufacturers assembly guide.
Do not use the mobile access tower outside if it is windy. Take care using sheeting and tarpaulins on the tower. They will act like a sail if the wind catches them.

- Make sure that the area is clear and safe and that no one is near to you or could distract you.
Protect other people from the risk associated with working at height. Warn others to keep away, place barriers and signs around your work area.

- PERONS USING/ASSEMBLING OR DISMANTLING MOBILE ACCESS TOWER
Use with caution on uneven or sloping surfaces. Ensure that the ground is inspected for hidden underground services or ducts.
Keep away from electrical services and where possible isolate potential risks from other services.
In certain locations, such as public and pedestrian areas, a permit or written authority may be required from the local government.
Use with caution on uneven or sloping surfaces. Ensure that the ground is inspected for hidden underground services or ducts.
Keep away from electrical services and where possible isolate potential risks from other services.

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

Important note: This document must be read in conjunction with the original assembly guide

- It is important to read this leaflet and the manufactures assembly guide before you use the mobile access tower system.
Do not exceed the maximum load of the mobile access tower. This information is detailed on the castors of the mobile access tower.
Do not exceed the Safe Working Load (SWL) detailed on each of the working platforms/Decks.
If you have not used, assembled or dismantled a mobile access tower before, familiarise yourself with the equipment's components before you start the main task.
Plan your work and think ahead to make sure that you will always be working safely.
Prepare a risk assessment for the task.
You should have at least the following items of personal protective equipment:
Hard hat with chin strap to EN397
Boots or protective footwear to a minimum EN345
Gloves.
The mobile access tower must not be used by minors, or by anyone under the influence of drugs or alcohol.
This equipment is designed for use by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.
If the mobile access tower is to remain in position when unattended, for example overnight, then you should make it secure to prevent unauthorised use.



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

v:012017